

UNLOCK WARNING SWITCH

INSPECTION

1. INSPECT UNLOCK WARNING SWITCH ASSEMBLY

- (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Pushed	Below 1 Ω
	Not pushed	10 k Ω or higher

If the result is not as specified, replace the switch assembly.

